


		Description	Value range (record display)	Default value (record display)
01	PLL	Current difficulty level	001-003	002
02	VoL	Game volume level	001-031	022
03	BAS	Equalizer low tones	001-031	024
04	trE	Equalizer high tones	001-031	022
05	FrE	Free play mode	off / on	off
06	bSt	Best score limit	001-999	999
07	rEc	Reset record / Record drop-down setting (50 points every X hours)	To reset press and hold S2 and S3 buttons for 3 seconds. 001-099 (hours)	005
08	CON	Demo repeat delay	001-099 (minutes)	015
09-15	PL1-PL7	Credit setting for 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor *		
16-22	Cn1-Cn7	Money counter setting for 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor **		
23-25	Cr1-Cr3	Sensor sensitivity setting for 1st level of game difficulty ***	-99 - 099	020, 080, -60
26	---	Daily money counter (erasable memory)	To reset press and hold S2 and S3 buttons for 3 seconds.	
27	---	Total money counter (non-erasable memory)		
28	---	Daily credit counter (erasable memory)	To reset press and hold S2 and S3 buttons for 3 seconds.	
29	---	Total credit counter (non-erasable memory)		
30	---	Daily free-credit counter (erasable memory)	To reset press and hold S2 and S3 buttons for 3 seconds.	
31	---	Total free-credit counter (non-erasable memory)		
32	Adr	Address of GSM module		
33	tFr	Tickets for best score		no
34-36	t-1 - t-3	Tickets and points value for exceeding 1st, 2nd, 3rd score threshold ****	no / yes	no
37-43	tc1-tc7	Tickets for coins and bills inserted on 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor		
44	Clr	Clear active credits	no / yes	
45	dFL		no / yes	
00		Exit menu. To apply changes turn off the machine and wait 5 seconds until turning the machine on.	Restore default settings	

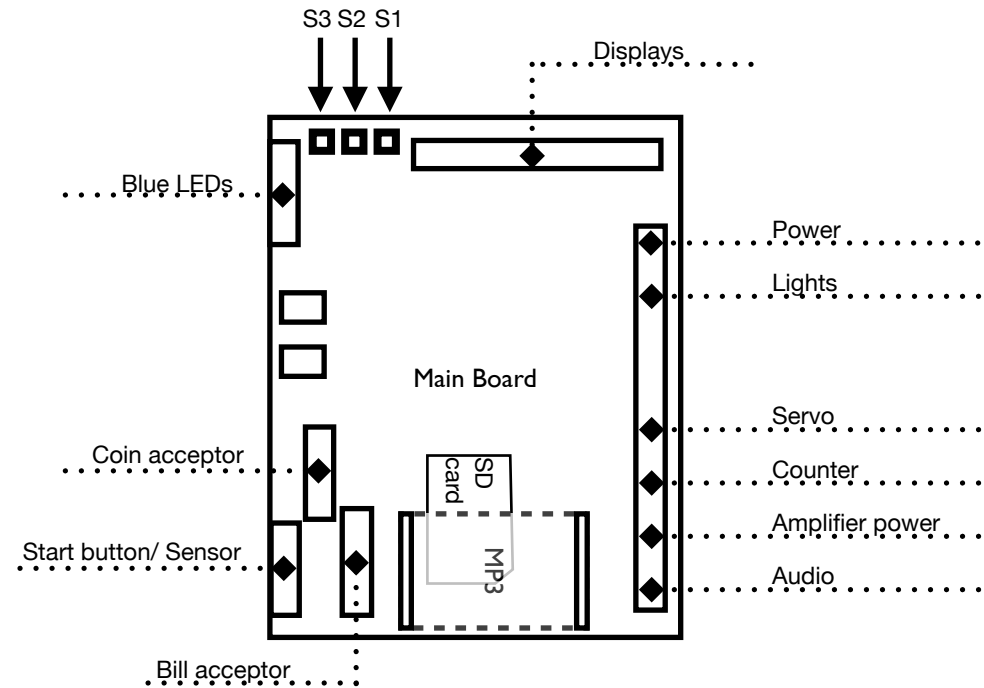

Warning: Making adjustments or performing procedures other than those specified in your equipment's manual may result in hazardous electric shock.

Warning: The wiring system in your Kriss-Sport Boxer machine is under voltage that is safe in normal use but may be harmful while improper use. For your safety, have all electrical equipment serviced only by an Kriss-Sport Authorized Service Provider.

Warning: While replacing fuse make sure that the switch is off. Use only 5A low-burn fuses.

* - credit quantity for one coin or bill on this channel

** - value of coin or bill on this channel

*** - bigger value equal higher score with the same power of punch

**** - First value represents amount of hundreds of points for score threshold. Second value represents ticket quantity. 3-1 stand for „If score is higher than 300 points, give 1 ticket”.

Global Technical Support

Online support: <http://kriss-sport.com/support/>

E-mail: support@kriss-sport.com

Skype: **kriss-sport-support**

Phone: **+48 601 521 140**