


Menu position (credit display)	Description	Value range (record display)	Default value (record display)
01	Current difficulty level	001-003	002
02	Game volume level	001-031	022
03	Equalizer low tones	001-031	024
04	Equalizer high tones	001-031	022
05	Free play mode	off / on	off
06	Max score limit	001-999	999
07	Reset record / Record drop-down setting (50 points every X hours)	To reset press and hold S2 and S3 buttons for 3 seconds.	
		001-099 (hours)	005
08	Demo repeat delay	001-099 (minutes)	015
09	Credit setting for 1st channel of coin-acceptor *		0.50
10	Credit setting for 2nd channel of coin-acceptor *		1.00
11	Credit setting for 3rd channel of coin-acceptor *		2.00
12	Credit setting for 1st channel of bill-acceptor *		1.00
13	Credit setting for 2nd channel of bill-acceptor *		6.00
14	Credit setting for 3rd channel of bill-acceptor *		013
15	Credit setting for 4th channel of bill-acceptor *		027
16	Money counter setting for 1st channel of coin-acceptor **		0.50
17	Money counter setting for 2nd channel of coin-acceptor **		1.00
18	Money counter setting for 3rd channel of coin-acceptor **		2.00
19	Money counter setting for 1st channel of bill-acceptor **		1.00
20	Money counter setting for 2nd channel of bill-acceptor **		5.00
21	Money counter setting for 3rd channel of bill-acceptor **		010
22	Money counter setting for 4th channel of bill-acceptor **		020
23	Sensor sensitivity setting for 1st level of game difficulty ***		020
24	Sensor sensitivity setting for 2nd level of game difficulty ***		060
25	Sensor sensitivity setting for 3rd level of game difficulty ***		-30
26	Daily money counter (erasable memory)	To reset press and hold S2 and S3 buttons for 3 seconds.	
27	Total money counter (non-erasable memory)		
28	Daily credit counter (erasable memory)	To reset press and hold S2 and S3 buttons for 3 seconds.	
29	Total credit counter (non-erasable memory)		
30	Daily free-credit counter (erasable memory)	To reset press and hold S2 and S3 buttons for 3 seconds.	
31	Total free-credit counter (non-erasable memory)		
32	Address of GSM module		
33	Erase credits	no / yes	no
34	Back to factory default settings	no / yes	no
00	Exit menu. To apply changes turn off the machine and wait 5 seconds until turning the machine on.		

* - credit quantity for one coin or bill on this channel

** - value of coin or bill on this channel

*** - bigger value equal higher score with the same power of punch

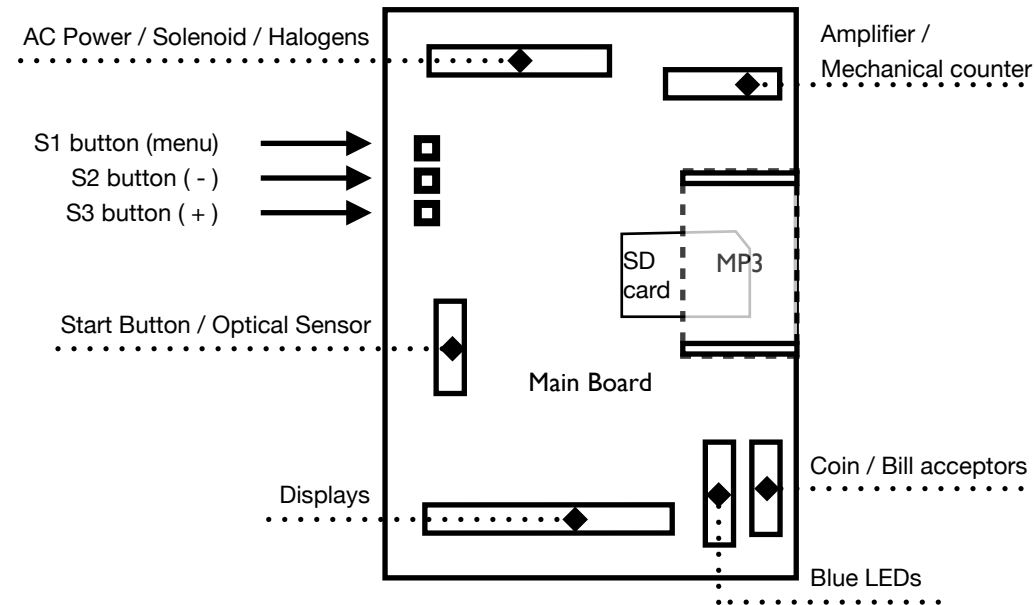

Warning: Making adjustments or performing procedures other than those specified in your equipment's manual may result in hazardous electric shock.

Warning: The wiring system in your Kriss-Sport Boxer machine is under voltage that is safe in normal use but may be harmful while in improper use. For your safety, have all electrical equipment serviced only by an Kriss-Sport Authorized Service Provider.

Warning: While replacing a fuse, make sure that the switch is off. Use only 5A low-burn fuses.

Technical Support

Online video support: <http://kriss-sport.com/support/>

login: **customer** password: **1yearwarranty**

E-mail: support@kriss-sport.com

Skype: **kriss-sport-support**

Phone: **+48 601 521 140**