


		Description	Default value
01	FrE	Free play mode	off
02	rdd	Best score auto drop-down delay in minutes ***	005
03	rdV	Best score auto drop-down value in points.	005
04	rdL	Best score auto drop-down limit in points	800
05	tFG	Tickets for game	000
06	Cr1	Power correction multiplier	055
07-13	PL1 - PL7	Credit setting for coin and bill acceptor channels *	
14-20	Cn1 - Cn7	Money counter setting for coin and bill acceptor channels **	
21	---	Money counter (erasable)	
22	---	Money counter (total, non-erasable)	
23	---	Game counter (erasable)	
24	---	Game counter (total, non-erasable)	
25	---	Free-play game counter (erasable)	
26	---	Free-play game counter (total, non-erasable)	
27	---	Big prize counter (erasable)	
28	---	Big prize counter (total, non-erasable)	
29	---	Small prize counter (erasable)	
30	---	Small prize counter (total, non-erasable)	
31	CLr	Clear active credits	no
32	JP1	Small prize limit	0
33	JP2	Big prize limit	0
34	dFI	Default settings	no

* - Credit quantity for one coin or bill on this channel.

** - Value of coin or bill on this channel.

*** - To reset press and hold S2 and S3 on the main-board.

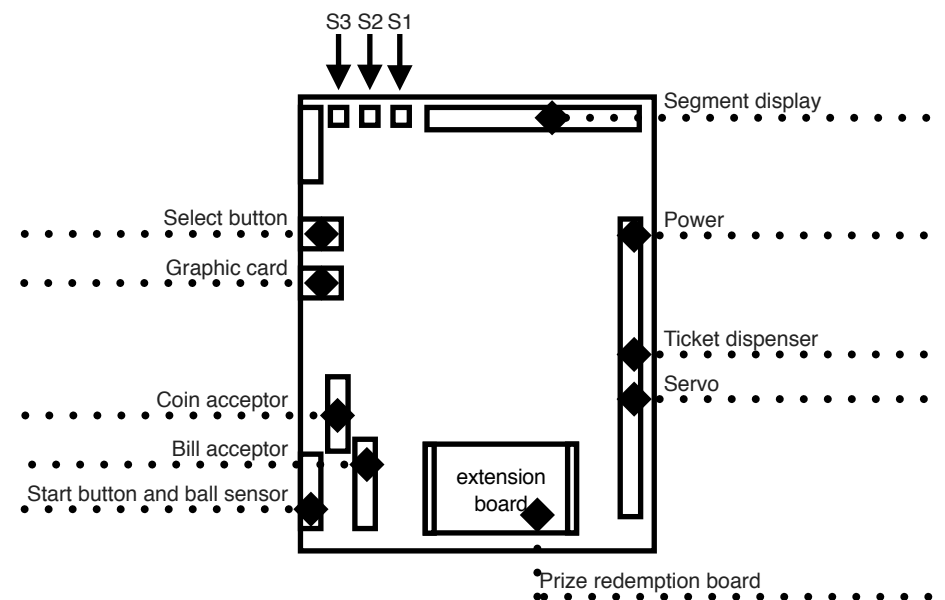

Warning: Making adjustments or performing procedures other than those specified in your equipment's manual may result in hazardous electric shock.

Warning: The wiring system in the machine is under voltage that is safe in normal use but may be harmful while improper use. For your safety, have all electrical equipment serviced only by a Kriss-Sport Authorized Service Provider.

Warning: While replacing fuse make sure that the switch is off. Use only 5A low-burn fuses.

Technical Support

Online video support: <http://kriss-sport.com/support/>
login: **customer** password: **1yearwarranty**

E-mail: support@kriss-sport.com

Skype: **kriss-sport-support**

Phone: **+48 601 521 140**

PUNCH TO WIN