
		Description	Default value (record display)
01	PLL	Game difficulty level	002
02	VoL	Game volume level	022
03	BAS	Equalizer low tones	024
04	trE	Equalizer high tones	022
05	FrE	Free play mode	off
06	ruL	Match mode	off
07	Pru	Percentage if win matches	
80	BeS	Best score limit	999
09	rEc	record drop-down delay (hours)	1
10	Con	demo animation delay (minutes)	15
11-17	PL1-PL7	Credit setting for coin and bill acceptor channels *	
18-24	Cn1-Cn7	Money counter setting for coin and bill acceptor channels **	
25-27	Cr1-Cr3	Sensor sensitivity setting for each level of game difficulty	
28		Daily game counter (erasable memory)	
29		Total game counter (non-erasable memory)	
30		Daily credit counter (erasable memory)	
31		Total credit counter (non-erasable memory)	
32		Daily free-credit counter (erasable memory)	
33		Total free-credit counter (non-erasable memory)	
34	Adr	Tickets and points value for exceeding 1st. 2nd, 3rd score threshold ****	
35	dFL	Tickets for coins and bills inserted on 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor	no

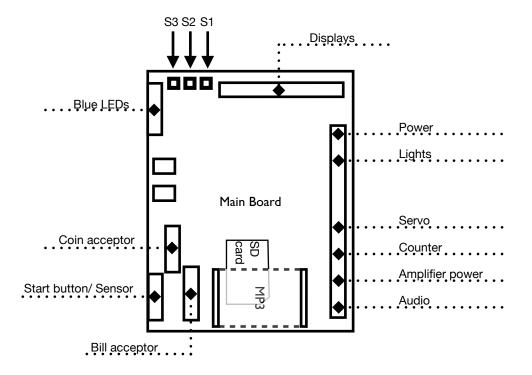

Warning: Making adjustments or performing procedures other that those specified in your equipment's manual may result in hazardous electric shock.

Warning: The wiring system in your Kriss-Sport Boxer machine is under voltage that is safe in normal use but may be harmful while improper use. For your safety, have all electrical equipment serviced only by an Kriss-Sport Authorized Service Provider.

Warning: While replacing fuse make sure that the switch is off. Use only 5A low-burn fuses.

Global Technical Support

Online support: http://kriss-sport.com/support/

E-mail: support@kriss-sport.com
Skype: kriss-sport.com

Phone: +48 601 521 140

^{* -} credit quantity for one coin or bill on this channel

^{** -} value of coin or bill on this channel