

## How to change machine volume?

1. Power on the machine.
2. Wait for machine to start.
3. Make sure that you are able to open punch-ball - insert credit or enable free-play mode.
4. Open punch-ball.
5. Locate speaker inside the machine.
6. Locate amplifier on the right side of the speaker-box.
7. Locate volume control knob on the bottom of amplifier.
8. Adjust volume by turning the knob. Turn it clockwise for higher volume and counter-clockwise for lower volume. If you find the knob on the amplifier hard to reach use flat screwdriver.

