


Electronic safe operating instructions

1. Open the safe

- a. Input your code (default 159), then press the “B” button, the green light will turn on.
- b. Turn the knob clockwise within 5 seconds, the door is opened.
- c. Each key being pressed is invalid then yellow light will flash and the buzzer will quickly beep, the user should enter the correct one again.

2. Change the code

- a. with door open, locate the red button on the inside of the door near hinge and press. You will hear 2 beeps and yellow light turn on (10 seconds).

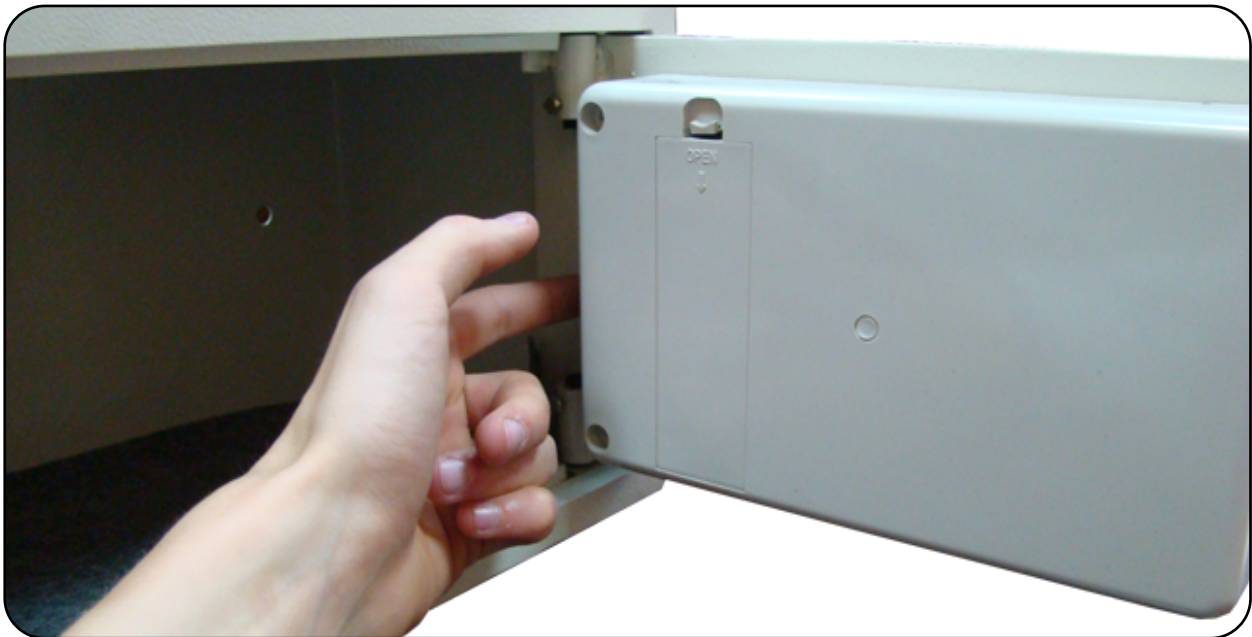

- b. Input a new code of 3 to 8 digits, then press “B” button. The storage of the new code will be confirmed by two beeps.

3. Close the safe

- a. Turn the knob Anti-clockwise, the mechanism will automatically close the safe.

Caution: Anti-tampering: 3 times code error will lock out the safe for 20 seconds, until wrong code penalty time has expired.

4. Change the Battery

If both the red and green lights are on, this indicates that the batteries must be changed. To be sure the batteries are correctly installed please test before you close the safe's door. Please use 4 x AA Alkaline Battery.

5. Use your emergency key (Override)

If you forget your code, or battery used down, remove the center cover of the keypad, you will find a lock to open the safe.