


		Description (Angry Penguins)	Default value
01	FrE	Free play mode	off
02	rdd	Record drop delay	005
03	rdV	Record drop value	005
04	be1	Best score limit for 1st game	999
05	be2	Best score limit for 2nd game	999
06	Cr1	Power correction for 1st and 4th game (man power)	055
07	Cr2	Power correction for 2nd game (woman power)	99
08	Cr3	Time correction for reflex	-30
09-15	PL1 - PL7	Credit setting for 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor *	
16-22	PE1 - PE7	Extra credit setting for 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor *	
23-29	Cn1 - Cn7	Money counter setting for 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor **	
30	---	First game counter	
31	---	Second game counter	
32	---	Third game counter	
33	---	Fourth game counter	
34	---	Daily money counter ***	
35	---	Total money counter	
36	---	Daily games counter ***	
37	---	Total games counter	
38	---	Daily free games counter ***	
39	---	Total free games counter	
40	Clr	Clear active credits	no
41	bon	Bonus ratio	001
42	dFG	Default game	002
43	GA1	1st game exclusion	off
44	GA2	2nd game exclusion	on
45	GA3	3rd game exclusion	off
46	GA4	4th game exclusion	off
47	tFr	Tickets for best score	002
48-50	t-1 - t-3	Tickets and points value for exceeding 1st, 2nd, 3rd score threshold ****	
51-57	tc1-tc7	Tickets for coins and bills inserted on 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor	
58	dFL	Restore default settings	no

* - Credit quantity for one coin or bill on this channel.

** - Value of coin or bill on this channel.

*** - To reset press and hold S2 and S3 on the main-board.

**** - First value represents amount of hundreds of points for score threshold. Second value represents ticket quantity. 3-1 stand for „If score is higher than 300 points, give 1 ticket”.

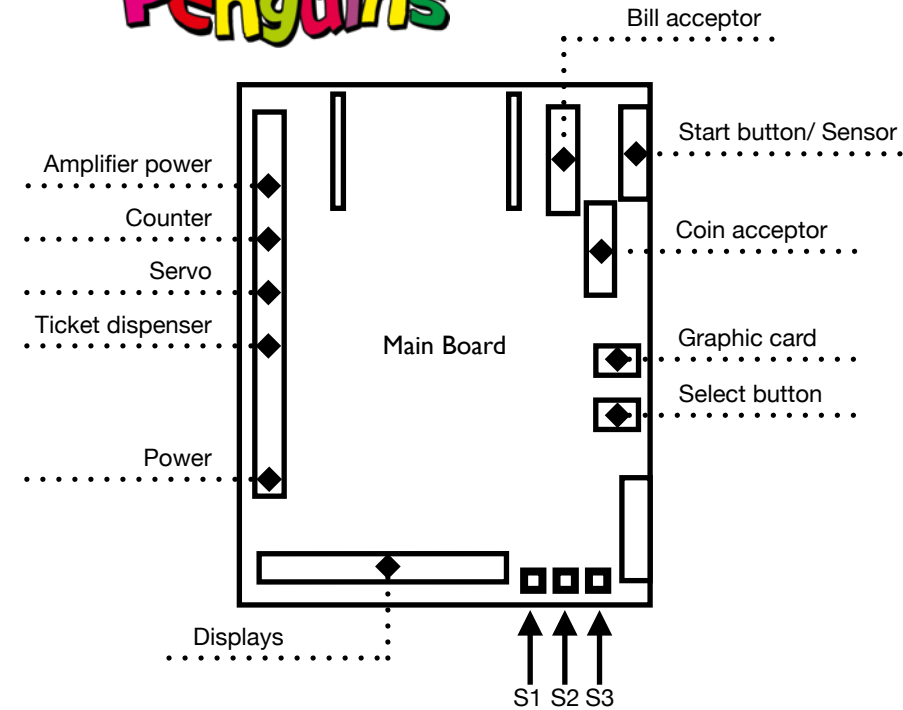

Warning: Making adjustments or performing procedures other than those specified in your equipment's manual may result in hazardous electric shock.

Warning: The wiring system in your Kriss-Sport Boxer machine is under voltage that is safe in normal use but may be harmful while improper use. For your safety, have all electrical equipment serviced only by an Kriss-Sport Authorized Service Provider.

Warning: While replacing fuse make sure that the switch is off. Use only 5A low-burn fuses.

Technical Support

Online video support: <http://kriss-sport.com/support/>
login: **customer** password: **1yearwarranty**

E-mail: support@kriss-sport.com

Skype: **kriss-sport-support**

Phone: +48 601 521 140