


|       |           | Description (Army Boxer)   | Default value |
|-------|-----------|--|---------------|
| 01    | FrE       | Free play mode   | off           |
| 02    | rdd       | Record drop delay  | 005           |
| 03    | rdV       | Record drop value  | 005           |
| 04    | be1       | Best score limit for 1st game  | 999           |
| 05    | be2       | Best score limit for 2nd game  | 999           |
| 06    | Cr1       | Power correction for 1st game (man power)  | 055           |
| 07    | Cr2       | Power correction for 2nd game (woman power)  | 99            |
| 08    | Cr3       | Time correction for reflex   | -30           |
| 09    | Cr4       | Power correction for 4th game (precision)  | 055           |
| 10-16 | PL1 - PL7 | Credit setting for 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor *                    |               |
| 17-23 | PE1 - PE7 | Extra credit setting for 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor *              |               |
| 24-30 | Cn1 - Cn7 | Money counter setting for 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor **            |               |
| 31    | ---       | First game counter   |               |
| 32    | ---       | Second game counter  |               |
| 33    | ---       | Third game counter   |               |
| 34    | ---       | Fourth game counter  |               |
| 35    | ---       | Daily money counter ***  |               |
| 36    | ---       | Total money counter  |               |
| 37    | ---       | Daily games counter ***  |               |
| 38    | ---       | Total games counter  |               |
| 39    | ---       | Daily free games counter ***   |               |
| 40    | ---       | Total free games counter   |               |
| 41    | Clr       | Clear active credits   | no            |
| 42    | bon       | Bonus ratio  | 001           |
| 43    | dFG       | Default game   | 001           |
| 44    | GA1       | 1st game exclusion   | on            |
| 45    | GA2       | 2nd game exclusion   | on            |
| 46    | GA3       | 3rd game exclusion   | on            |
| 47    | GA4       | 4th game exclusion   | on            |
| 48    | tFr       | Tickets for best score   | 002           |
| 49-51 | t-1 - t-3 | Tickets and points value for exceeding 1st, 2nd, 3rd score threshold ****  |               |
| 52-58 | tc1-tc7   | Tickets for coins and bills inserted on 1st, 2nd, 3rd channel of coin-acceptor and 1st, 2nd, 3rd, 4th channel of bill-acceptor |               |
| 59    | dFL       | Restore default settings   | no            |

\* - Credit quantity for one coin or bill on this channel.

\*\* - Value of coin or bill on this channel.

\*\*\* - To reset press and hold S2 and S3 on the main-board.

\*\*\*\* - First value represents amount of hundreds of points for score threshold. Second value represents ticket quantity. 3-1 stand for „If score is higher than 300 points, give 1 ticket“.

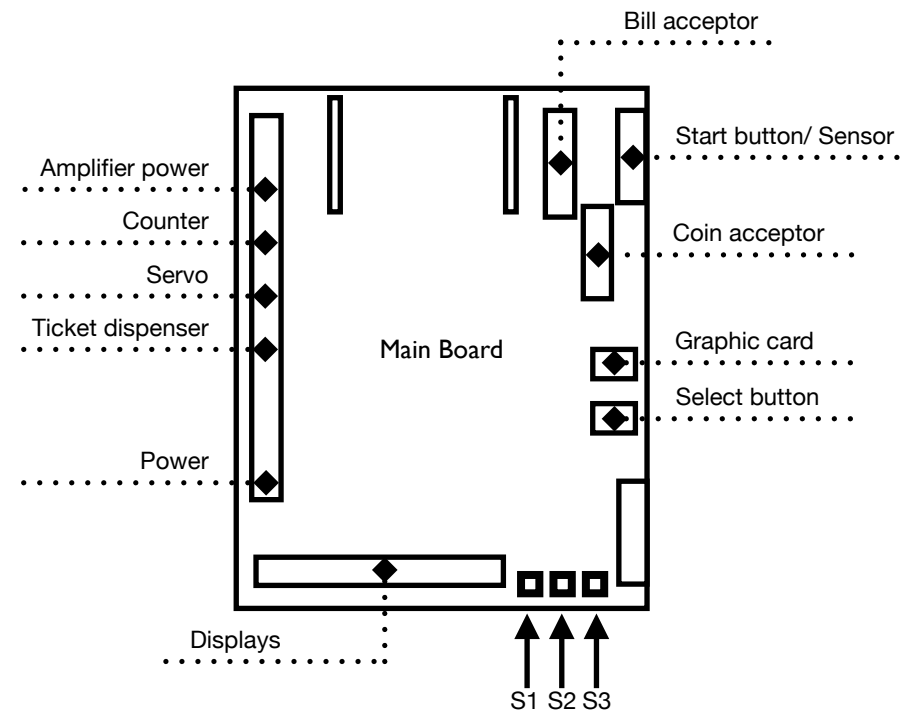

**Warning:** Making adjustments or performing procedures other than those specified in your equipment's manual may result in hazardous electric shock.

**Warning:** The wiring system in your Kriss-Sport Boxer machine is under voltage that is safe in normal use but may be harmful while improper use. For your safety, have all electrical equipment serviced only by an Kriss-Sport Authorized Service Provider.

**Warning:** While replacing fuse make sure that the switch is off. Use only 5A low-burn fuses.

## Technical Support

Online video support: <http://kriss-sport.com/support/>  
login: **customer** password: **1yearwarranty**

E-mail: [support@kriss-sport.com](mailto:support@kriss-sport.com)

Skype: **kriss-sport-support**

Phone: **+48 601 521 140**